

Yaesu FT-60R VHF/UHF Dual Band Transceiver	
Storing a frequency in memory	
1. Select VFO Mode	Press [V/M] , less than 1 second. The Channel number should be out.
2. Frequency	Directly enter the frequency, 6 digits
3. Set Offset (pg 20)	1. Press [F/W] then [4(RPT)] . 2. Use Tuning control to select +, --, OFF 3. Press [F/W] to save.
4. Set Tone/CTCSS (pg 22)	1. Press [F/W] then [1(SQ TYP)] . 2. Use Tuning control to select "Tone", "TSQ", PTT to save. 3. Press [F/W] then [2(CODE)] . 4. Use Tuning control to select Tone Freq, [F/W] to save.
6. Store in Mem Channel	1. Press [F/W] for 1 second. Mem Channel Number blinks showing the next unassigned channel number. 2. Use Tuning control to select Mem channel. 3. Press [F/W] to save (listen for 1 beep), then [PTT] .
7. Delete a Mem Channel	1. Press [F/W] to enter MR mode. 2. Use Tuning control to select Mem channel to delete. 3. Briefly press [HM/RV] ; do not hold. 4. Display reverts to Channel 1.
8. Select Memory Mode	Press [V/M] . "MEMORY" is briefly displayed, then frequency display with channel number.

Other Operations				
9. Set Power Level (pg 15)	1. Press [F/W] , then [3 (TX PO)] 2. Use Tuning control to select LOW, MED, HIGH 3. Press [PTT] to save.			
10. Factory Reset	1. Turn radio off 2. Press & hold the MONI switch while turning the radio on. 3. Rotate the DIAL knob to select one choice F1 SETRST: Resets the Set (Menu) mode. F2 MEMRST: Clears Memory. F3 MB RST: Clears Memory Bank Assignments. F4 ALLRST: Restore to factory defaults. 4. Press the [F/W] key momentarily to execute the reset.			
11. Set Menu Mode	1. Press [F/W] , then [0(SET)] 2. Use Tuning control to select 1 .. 56 2. Press [F/W] again for submenus. 3. Use Tuning control to select. Press [PTT] to save.			
1. AutoPowerOff 2. Beep Option 3. ARTS 4. ARS 5. BCLO 6. Beep 7. Bell 8. Busy LED 9. CPU Clock Freq 10. CWID 11. Store CWID	12. DC Volts 13. DCS Code 14. DCS N/R 15. DTMF delay 16. DTMF speed 17. DTMF Writer 18. EAI 19. Edge Band Beep 20. EMG S 21. Internet Link 22. WIRES DTMF	23. Wires MemReg 24. Lamp Keybd 25. Lock Combination 26. MONI Sw.F 27. DispName/Freq 28. StoreChName 29. CTSS Paging 30. Page AutoAns 31. PageCode 32. PageCode CTCSS 33. PasswdEnable	34. Passwd Store 35. ResumeScan 36. REV/HM 37. RF Squelch Adj 38. Repeater Shift Dir 39. Priority Revert 40. Receiving Mode 41. Rx Battery Saver 42. Smart Search Mode 43. ScanCh Mode 44. ScanLamp	45. Repeater Shift Offset 46. MemScan Skip Mode 47. CTSS/DCS Split 48. Select Tone Encoder 49. Synthesizer Steps 50. Set CTCSS Tone Freq 51. TOT Time 52. Enable TX LED 53. Tx Battery Saver 54. VFO Band Edge 55. Wide/Narrow Dev 56. WX Alert Scan Mode